User Manual

Alarm Clock-Ver B 1.0

Thank you for purchasing this product. To ensure properly use and trouble-free operation, please read this manual carefully and store it in a safe place for future reference.

PACKAGE CONTENTS

- 1 × Alarm Clock
- 1 × USB Power Cable
- 1 × User Manual

TECHNICAL SPECIFICATIONS

- Input voltage: 5V DC
- Input current: 1000mA
- Standby power : <0.5W

PRODUCT OVERVIEW

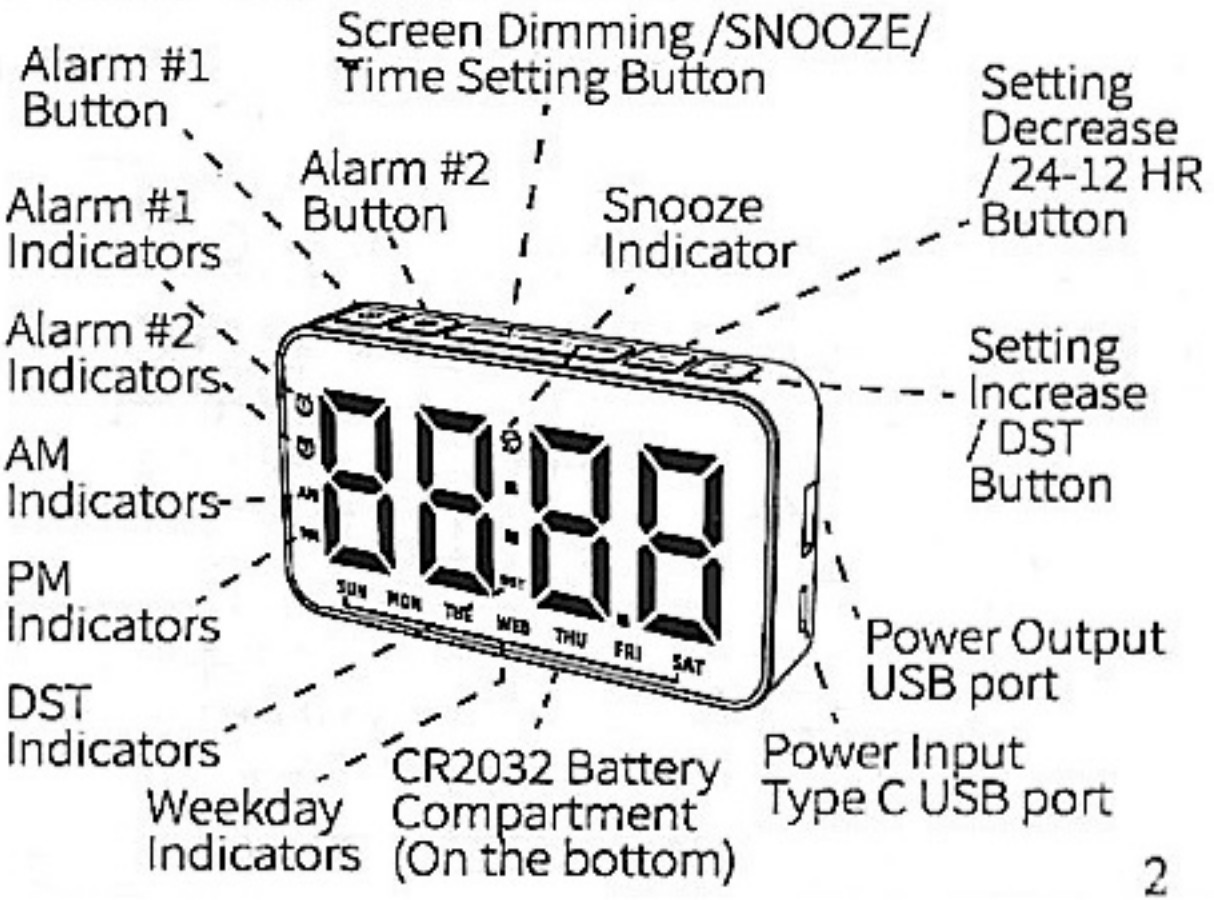

OPERATING INSTRUCTIONS

1. Power on

Plug in the power cable to power on the device.
Unplug the power cable to power off.

2. Adjusting Screen Display Brightness

When the alarm is not activate, Short press the Screen Dimming button to adjust the brightness of screen display. There are 5 levels of brightness.

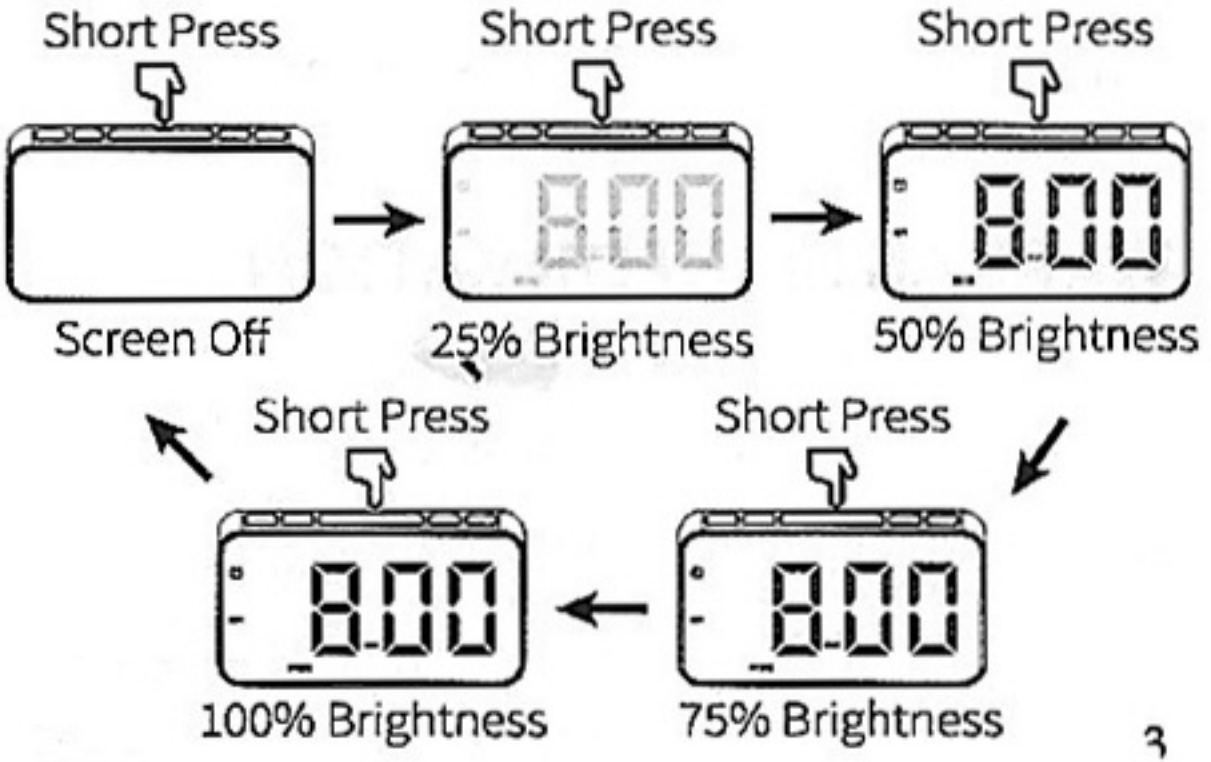

3. Time Set Up

Press and hold the Time Setting Button to set up the time. When the hour digits on the screen start to blink, short press the Time Setting button to switch the setting items in sequence among the hour setting, the minute setting and week day setting.

When the related icon blinking, short press the — button or + button to change the value of the setting item. Press the Time Setting button to confirm the setting and move to next setting item till it' s finish.

Note: The setting will be applied if the whole setting procedure finish or the Time Setting button had been hold for 2 seconds during the setting.(The rest of the setting will keep the same as before.)

How to Set Up the Clock Time

1 Enter time setting

Press & Hold

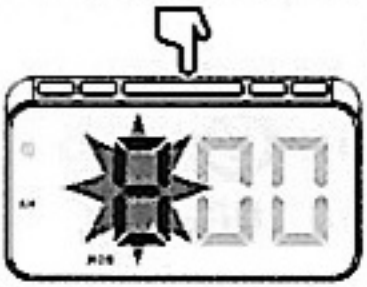

2 Change Hour

Press — or +

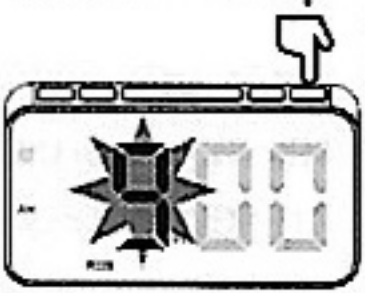

3 Confirm & Next

Press

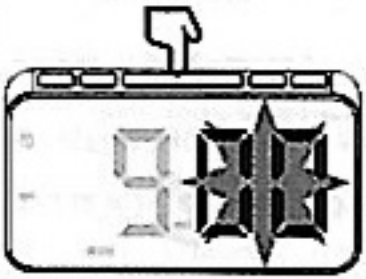

4 Change Minute

Press — or +

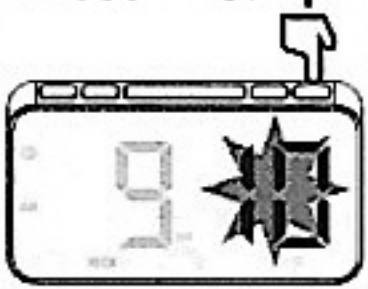

5 Confirm & Next

Press

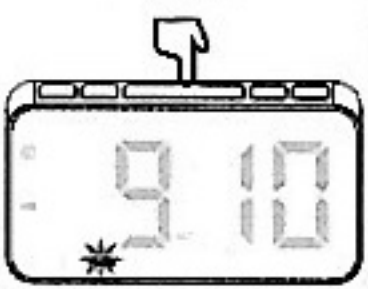

6 Change Week Day

Press — or +

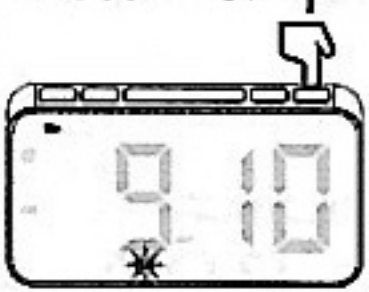

7 Confirm & Finish

Press

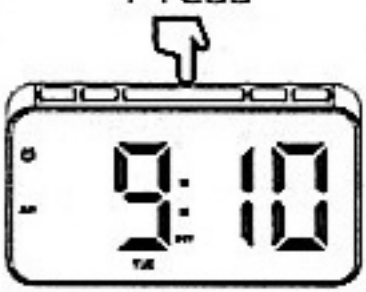

Note: It means the icons are flashing when it cover with this star. ✸

4. Turn on/ off the Alarm Clock.

Short press ① button to turn on/off Alarm #1.

Short press ② button to turn on/off Alarm #2.

When the ① or ② shown on the screen, it means the related alarm turn on.

When the alarm ring, press the ① or ② button to stop the alarm ringing.

5. Set the Alarm Clock

Press and hold the ① or ② button to set up the alarm. When the item is blinking on the screen, press ① or ② to change the value. When the setting item is changed, you can short press the ① or ② button to confirm and move to next settings follow below sequence, alarm hour, alarm minute and alarm week days.

Note: The setting will be saved if the whole setting procedure finish or the ① or ②

button had been hold for 2 seconds during the setting.(The rest of the setting will keep the same as before.)

The whole setting procedure as follow.

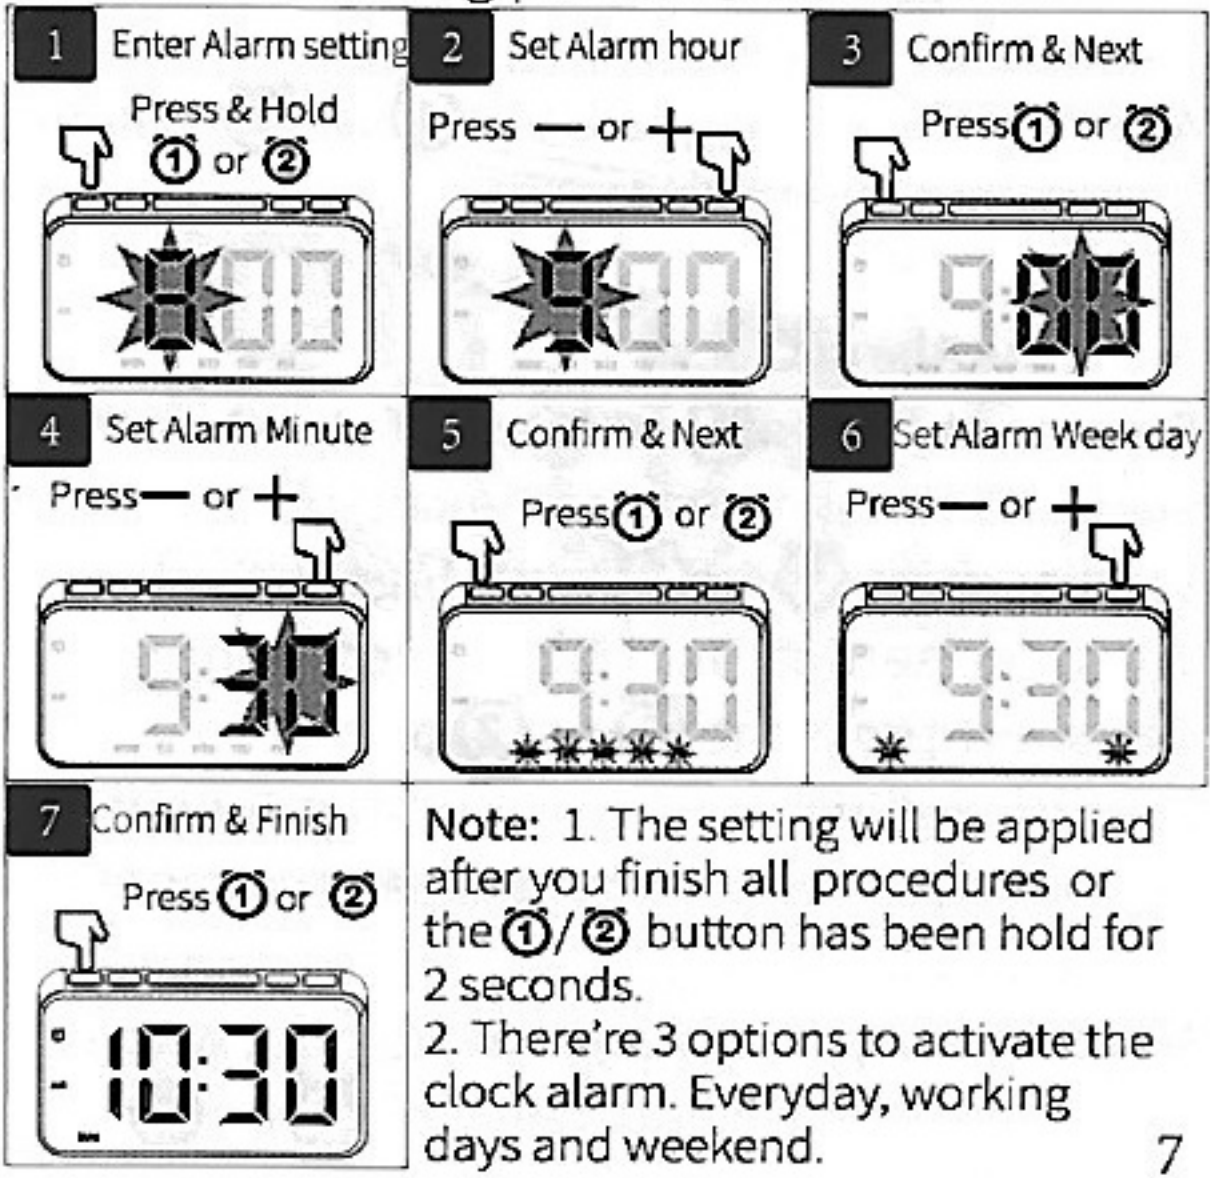

Note: 1. The setting will be applied after you finish all procedures or the ①/② button has been hold for 2 seconds.

2. There're 3 options to activate the clock alarm. Everyday, working days and weekend.

6. SNOOZE Mode

When the alarm ring, short press the SNOOZE button, the alarm will stop and ring again after 9 minutes. The alarm will be turn off if the SNOOZE button was pressed for 5 times for SNOOZE.
When the alarm ring, short press the ① button or the ② button can separately turn off the alarm clock for this time.

How to SNOOZE

7. DST Setting

DST also referred to as daylight savings time. Press & hold the DST button, the clock will set 1 hour forward with DST indicator showing on the screen. Press & hold it again, the clock will fall back 1 hour with DST indicator off on the screen.

8. Setting Time Format 24/12 Hour

Press & hold the **24-12 HR** button to switch the time format between 24 Hour and 12 Hour. The screen will show 24 H or 12 H when it's set.

9. Stop the Alarm when it's ring.

When the clock alarm ring, short press the ① or ② button on the bottom. The clock alarm will stop ringing this time.

10. Set the Alarm Volume.

Short press the — or + button to adjust the alarm volume from Level 1 to 5. The volume will apply for all 2 alarms.

The level of the volume will shown on the screen during the adjustment.

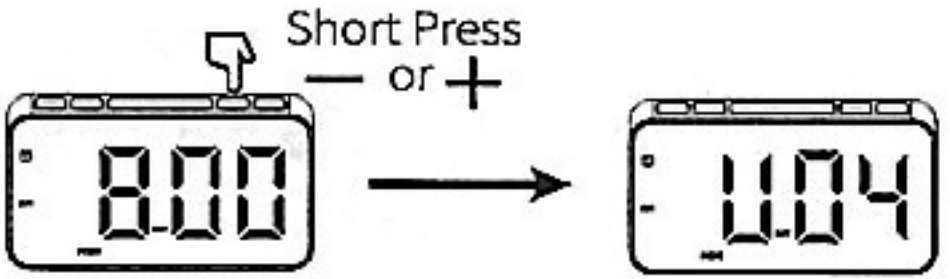

Volume Level 4

FEATURES

1. Alarm Clock

(2 Alarms, 3 modes for alarm activating on working day, weekend and whole week)

2. SNOOZE

(When the Alarm activate, press the SNOOZE button. The Alarm will stop and activate again 9 minutes later)

3. Hang on the wall

There's a hook on the back of the device. It can be hanged on the wall.

WARRANTY INFORMATION

If you have any product question ,or you have any product issues, please contact our e-mail:

supportletswill@163.com

Your name:_____ Order number:_____

E-mail:_____ Phone:_____

TROUBLE SHOOTING

If the unit has a problem, please try to follow the instructions below to solve it.

Problems	Possible causes	Solutions
The clock time indicator is off	Brightness of screen display is off	Short press the Screen Dimming button to adjust screen brightness
	No Power Supply	Make sure the Power adapter is well connected.
	In alarm clock setting mode	Press and hold the ① or ② button to exit alarm clock setting mode
	In time setting mode	Press and hold the Time Setting button to exit time setting mode.
No Alarm Sound	The Volume is set too low.	Press the + button to increase the volume.

LetsWill™

Tip 1: Select Week Days to Alarm

There're 3 modes of week days to alarm which is **Everyday, Working days, Weekend**. Please follow the instruction #5 on page 6 to setup.

Tip 2: Stop the Alarm Clock

When the clock alarm ring, press the ① or ② button on the bottom. The clock alarm will stop ringing this time.

Tip 3: To check Alarm Setting

Press & hold the ① or ② to enter alarm setting mode. The setting of the alarm will shown on the screen.

Tip 4: Why No Screen Display?

1. Please ensure the power is well connected.
2. Please try to short press the Screen Dimming to adjust the screen brightness.